


Quick set up guide

fresco[®]
AURORA
MODEL No. 23101

fresco[®]
NOVA
MODEL No. 22001

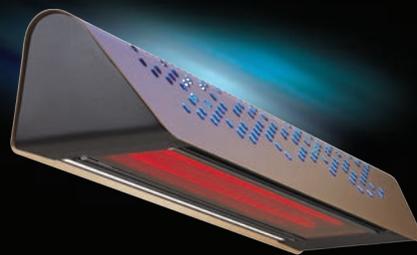

NOTE: Before operating the unit, the instructions and detailed safety cautions must be read.

The following clearances are required, when installing the Fresco.




Installing Fresco

STEP 1

Measure and mark the mounting holes on the ceiling at a distance of 1025mm. When installing into a plaster board ceiling, make sure that the unit is hung from the joists, beams or rafters. This Fresco unit is not suitable for recessed mounting.


STEP 2

Screw the fixing caps to the ceiling with the screws provided.

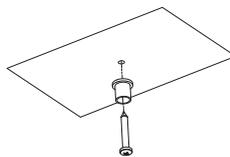

STEP 3

To remove the cable from the cable gripper assembly, loosen the clamping nut at the top of the gripper and push down. This loosens the lock and the cable is able to move freely through the gripper. When the downward pressure is released the gripper will lock onto the cable.

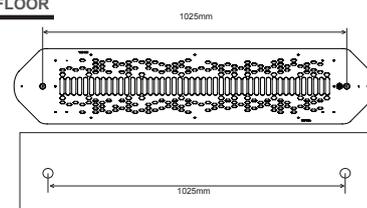

STEP 4

After the cable is removed from the gripper assembly, measure out the required cable length. The cable length required is calculated by the following formula.

Cable length required = Ceiling height – 2.1m (e.g. 2.4m – 2.1m = 0.3m of cable required)


When cutting the cable, the cut must be clean so that the end is not frayed which could cause the Cable catching on either the cable guides or the gripper assembly.

Note: This length is based on the lowest surface for the heater being 2.1 metres from the floor.

Note: The lowest point of the heater must be a minimum of 2.1m from the floor. If this is not done, the installation is not compliant.


STEP 5

After the cable is cut and before securing the cable back into the gripper assembly, thread the cable through the two cable guides (located on power cord). When threading the cable guide ensure the grub screw is loose to allow the cable to pass through easily. NOTE, do not pull the cable back through the grub without loosening as this will cause the cable to strip. When the right height is achieved, tighten and secure the grub screw in place.

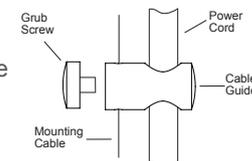

STEP 6

Now thread the mounting Cable through the gripper assembly and use the Clamping Nut to secure the Cable in place as shown in the picture from Step 3. When this is done screw the gripper assembly into the Fresco.

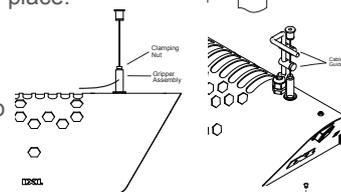


STEP 7

Lift the unit up to the ceiling and screw the fixture attachment to the fixing cap mounted in Step 2.

Re-set:

If you need to reset the unit, please use paper clip and insert into the 'resetting switch' hole located in the diagram. Once re-set power off/on to complete action.

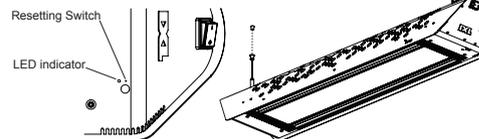


STEP 8

After the Fresco is secured to the ceiling, loosen one clamping nut at the time to ensure that the Fresco is horizontal and the bottom edge of the Fresco is a minimum of 2.1m from the floor. When this is adjusted to suit the requirements above, tighten the clamping nut. Tie a knot in the cable after the gripper assembly and cut excess cable length. The knot is to prevent the wire from slipping through the clamp if it becomes loose.

Note: The lowest point of the heater must be a minimum of 2.1m from the floor.

If this is not done, the installation is not compliant.

Note: The clamping nut MUST be very tight to ensure that the wire does not slip out. Refer to the image below.

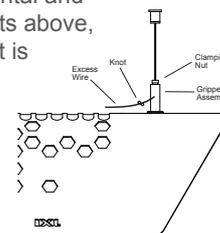

For further installation details refer to the Fresco User Guide.

Installation of any electrical wiring, power outlet or switch is to be carried out by registered/licensed electrician and must comply with the current Australian/New Zealand Wiring Rules AS/NZS 3000.


Step 9

Connect the power cord to a socket outlet located in close proximity to the Fresco. The Fresco is now ready to operate.

Note: It is not recommended to connect the Fresco in an extension cord.

Note: Only a licensed electrician can shorten the power cord if it is too long. When shortening the Power Cord the internal wiring of the Fresco unit must not be disrupted in any way.

What's Included

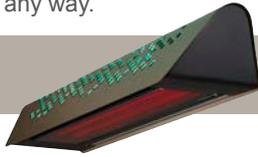

fresco[®]
AURORA
MODEL No. 23101



- 2 x screws for mounting
- 2 x mounting wires assemblies
- 1 x paperclip (for potential reset)
- User Guide
- Quick Set Up Guide



fresco[®]
NOVA
MODEL No. 22001

- 2 x screws for mounting
- 2 x mounting wires assemblies
- 1 x remote
- User Guide
- Quick Set Up Guide

Fresco Aurora App Set Up

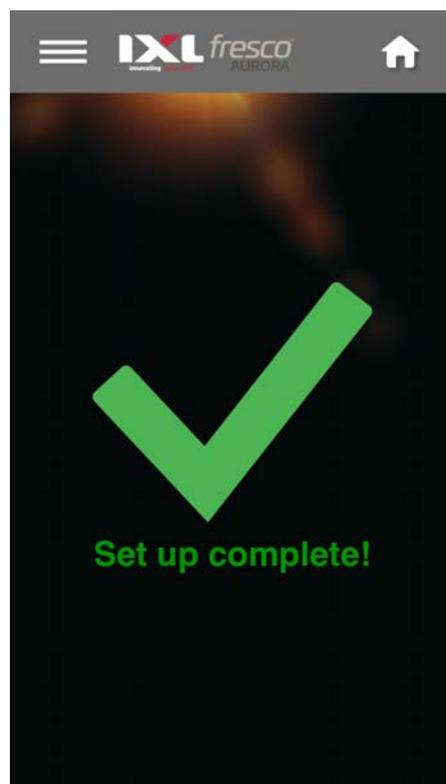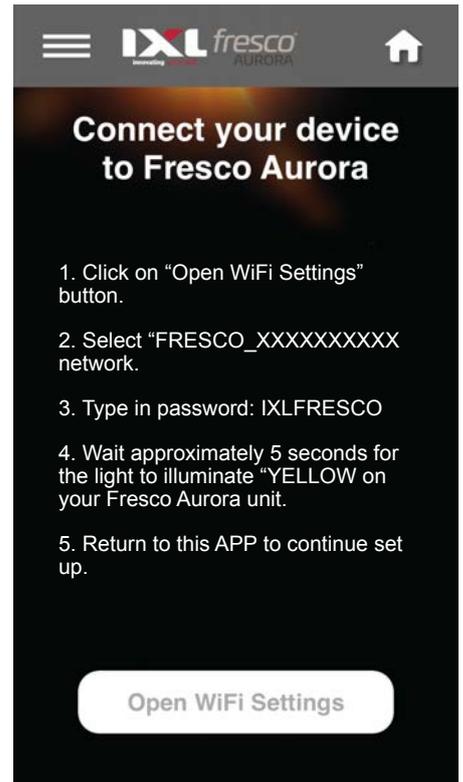

Fresco Aurora – Coloured Light Indicators for Connection	
Green Light	Access Point Ready
Yellow Light	Successful Connection to Access Point
Red Light	Disconnect from Access Point
Blue Light on for 20 seconds	Successful Connection to a Network

If you are having trouble connecting the Fresco Aurora App with the Fresco unit, please refer to the User Guide. If you manually turn off your unit off your unit, when turning back on, please allow 30 seconds for the Fresco Aurora and the app to configure. Your app will be ready to use once the Fresco unit illuminates blue light.



Australia
www.ixlappliances.com.au
1300 727 421

New Zealand
www.ixlappliances.co.nz
0800 727 421

Part Number:
611422 Revision E